


# IC Century Series


## Suffix -102 & -122

Primary			Secondary	
Voltage	Jumper	Connect Incoming Lines To	Voltage	Connect Load To
120	H1 to H3 & H2 to H4	H1 & H4	24	X1 & X2
240	H2 to H3	H1 & H4		

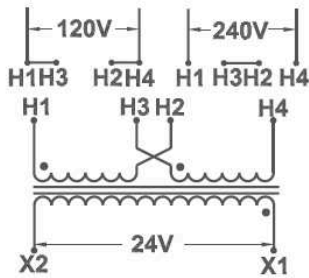


## Suffix -103 & -123

Primary			Secondary	
Voltage	Jumper	Connect Incoming Lines To	Voltage	Connect Load To
240	H1 to H3 & H2 to H4	H1 & H4	120	X1 & X2
230			115	
220			110	
480	H2 to H3	H1 & H4		
460				
440				

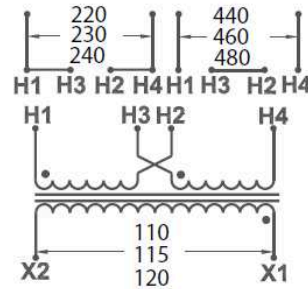

## Suffix -109 & -129

Primary			Secondary		
Voltage	Jumper	Connect Incoming Lines To	Voltage	Jumper	Connect Load To
380	-	H1 & H2			X1 to X3
			110	&	X1 & X4
400	-	H1 & H3			X2 to X4
			220	X2 to X3	X1 & X4
415	-	H1 & H4			

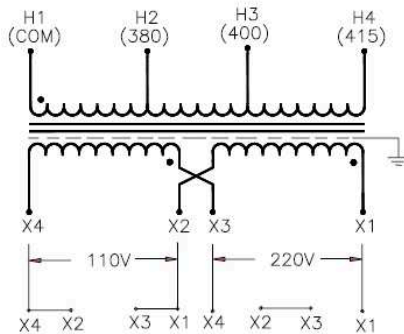

## Suffix -107 & -127

Primary			Secondary		
Voltage	Jumper	Connect Incoming Lines To	Voltage	Jumper	Connect Load To
240	H1 to H3 & H2 to H4	H1 & H4	120	X1 to X3	X1 & X4
230			115	&	
220			110	X2 to X4	
480	H2 to H3	H1 & H4	120	X1 to X3 &	X1 & X4
460			115	X2 to X4	
440			110	X2 to X4	
240	H1 to H3 & H2 to H4	H1 & H4	240		X1 & X4
230			230	X2 to X3	
220			220		
480	H2 to H3	H1 & H4	240		X1 & X4
460			230	X2 to X3	
440			220		

